



RC-106 Operation Instruction

	Remote Keys	Function	Performance
		ON/OFF	Turn ON and OFF the light
		Test Mode	Test the sensitivity of the lamps when installing them
		Holdtime Options	The time period keeping light at present brightness, can be : +∞/10S/30S/60S/90S/3M/5M/10M/15M/20M/25M/30M
		Daylight Threshold	Four levels of adjustable daylight threshold: disable/150lux/50lux/10lux
		Detection Area	Four levels of adjustable Detection Area: 25%/50%/75%/100%.

Remote's Performance

- When using the remote control, the remote control indicator light will be ON every time you press the setting, and the light will also flash once (blink mode), except for the ON/OFF button.
- When setting brightness Settings mode, the remote control indicator is on, but the lamp will not blink mode.
- The light is off but the induction is waiting to be triggered. At this time, the remote control setting is used.

Daylight Threshold

- Light sensor Settings are divided into four options gear (Disable/150Lux/50Lux/10Lux). Light sensors are set as closing, sensors, as long as someone moving detected the light.

Detection Area

The induction distance of the sensor is set with four options, which are: 20%/50%/75%/100%; When someone moves with in the sensor's set range, the sensor triggers.

Hold time

- If both holdtime is preset as +∞, the sensor changes to "always ON" mode.
- If holdtime present as 5min/10min/30min , after motion leaves the detection area, keep it for 5min/10min/30min period, then the lights turn off.